


# Installation

## SPC – PANELS



**1:** Using a circular saw or a jigsaw, cut your FibroTech SPC panel to the desired size. You can cut both the height and the width.

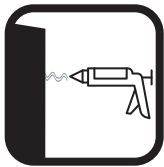

**2:** Apply adhesive to the back of the panel using a glue gun. Then place the panel against the wall.



**3:** Use a plastic hammer to gently tap the panel to ensure better adhesion.



**4:** After 24 hours, you can remove the protective film from the front of the FibroTech SPC panel.



### SURFACE

The surface to which the FibroTech SPC panel is to be glued must be smooth and clean.

### CUTTING

The FibroTech SPC panel can be cut using a circular saw or a jigsaw with a blade suitable for tiles.

You can easily make holes for electrical outlets or pipe penetrations using a punch tool.

### CHOICE OF ADHESIVE

Use FibroTech SPC adhesive or a similar product. Ask at your local DIY or building supply store.

### CLEANING

As FibroTech SPC panels are bacteria-resistant, there is no need for intensive cleaning.

Standard cleaning agents can be used. Harsh chemicals, bleach, etc. are not recommended.

### COMPLETION / FINISH

See the complete range of finishing trims and other accessories on our website.



Certifications, fire classifications, and environmental documentation depend on the product variant and application. Relevant certificates and declarations of conformity are available upon request. Scan for updated version to download: <https://fibrotech.com/en/product-information/>

TreeTops Trading A/S . Bavnevej 32 . DK-6580 Vamdrup . Phone +45 70 266 233 . info@treetops.dk . www.treetops.dk



Vers: TT 001  
26.03.2026